



SG-ALESS7KW & SG-ALESPL22KW



EV Charging Stations

User Manual

1.	About this manual	3
1.1	Copyright	3
1.2	Trademarks	3
1.3	Languages	3
1.4	Purpose and intended audience	3
1.5	Service and warranty	3
1.6	Disclaimer	3
1.7	Explanation of text instructions used	3
2.	Safety and usage instructions	4
2.1	Responsibilities of the owner and/or operator	4
2.2	Intended use	4
2.2.1	Operating conditions	4
3.	Product overview	6
3.1	Exterior view	6
3.2	Bottom view	7
3.3	Identification label	7
3.4	User interface	7
3.4.1	LED indications of the SG-ALESS7KW	7
3.4.2	Display of the SG-ALESPL22KW	8
3.4.2.1	Status indicator symbols	8
3.4.3	Access control for local authorization (RFID)	9
3.4.3.1	Installing the Master Key	9
3.4.3.2	Adding and removing charge cards in the local database	9
3.4.3.3	Removing the Master Key	10
4.	Operation	11
4.1	Socket model: Start charging with charge card	11
4.2	Socket model: Stop charging with charge card	11
4.3	Socket model: Start charging with Plug&Charge	12
4.4	Socket model: Stop charging with Plug&Charge	12
4.5	Fixed cable model: Start charging with charge card	13
4.6	Fixed cable model: Stop charging with charge card	13
4.7	Fixed cable model: Start charging with Plug&Charge	14
4.8	Fixed cable model: Stop charging with Plug&Charge	14
5.	Maintenance	15
5.1	Cleaning	15
6.	Error codes and troubleshooting	16
7.	Waste electrical and electronic equipment (WEEE)	20

1.1 Copyright

The reproduction, distribution and utilization of this document, as well as the communication of its contents to other parties without explicit authorization by SOLARMG or one of its affiliates, is strictly prohibited.

1.2 Trademarks

Any unauthorized use of the trademarks is therefore illegal.

1.3 Languages

The English version of this document is the original source. Documents in other languages are translations of this source.

1.4 Purpose and intended audience

This manual applies to the SG-ALESS7KW & SG-ALESPL22KW (in this document also indicated "charging station").

This manual is intended for the operator and owner (electrotechnical layman) of the charging station(s). It gives instructions for safe operation and useful information.

1.5 Service and warranty

If an error message is displayed (for models equipped with a display), refer to the error codes list to take the appropriate measure. When contacting your charge point supplier, always have the serial number of your charging station available to facilitate quick support. Your charge point supplier provides support to you.

The applicable Terms & Conditions of the carry-in warranty can be found here: Warranty.

1.6 Disclaimer

This document has been subjected to rigorous technical review before being published. It is revised at regular intervals, and any modifications and amendments are included in the subsequent issues. Although SOLARMG has made its best efforts to keep the document as precise and up-to-date as possible, SOLARMG does not assume any liability for defects and damage which results from the use of the information contained herein.

Any deviation to the products as assembled by SOLARMG including, but not limited to, customer-specific modifications to the product such as the placement of

stickers, SIM cards or the usage of different colors (all referred to as 'Customization') may affect the final product, its experience, appearance, quality and / or lifespan (the Customized Product). SOLARMG is not liable for any damage to, or caused by, the Customized Product if this damage is caused by this applied Customization.

SOLARMG shall not be liable in any way, for any kind of damage, and the (carry in) warranty for the product and the accessories shall not apply in the following cases:

- Failure to comply with the instructions in this manual in general and with the operating conditions specifically.
- Improper use.
- External damage.
- Installation, commissioning or faulty repair or maintenance by unqualified persons.
- Failures from the grid or the GPS / GPRS provider.
- Modification or configuration of the product or accessories without the knowledge of .
- Use of spare parts not approved or manufactured by SOLARMG.
- The charging station is used outside its operating conditions as stated in this manual.
- Situations have occurred that are beyond the control of SOLARMG (force majeure).
- Malfunction of an open charge point back office.
- Damage to the electrical vehicle.

1.7 Explanation of text instructions used

Safety warnings and precautions are indicated in this document as follows:

DANGER

Signal word used to indicate an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

Signal word used to indicate a potentially hazardous situation which, if not avoided, could result in death or serious injury

CAUTION

Signal word used to indicate a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTE

Signal word used to provide additional information or information on possible product damage.

2. SAFETY AND USAGE INSTRUCTIONS

2.1 Responsibilities of the owner and/or operator

As an operator without specialist electrical training, you may only carry out activities on the charging station that do not require a qualified electrician. The operator is responsible for the proper and safe use of the charging station.

⚠ DANGER

Risk of injury and electrocution. Never open the charging station. Only a qualified electrician may open the charging station.

⚠ DANGER

Risk of injury and electrocution. Do not use the charging station if it is damaged or plugs and cables are defective. Contact a qualified electrician to repair the defects immediately.

- The operator is responsible for the safety of the charging cable.
- Prevent the charging cable from mechanical damage and handle them with care at all times.
- Inspect the charging cable on visual damage every time before using.
- Place the charging cable into the corresponding support or in your car after use.

Prior to installation of the charging station, the vicinity of the charging station shall be approved by the installer regarding certain criteria. However, as the surroundings of the charging station may change over time, the following safety advices apply at all times:

⚠ DANGER

Risk of injuries, explosion or fire. Do not use the charging station in the vicinity of explosive or highly flammable substances.

⚠ DANGER

Risk of injury and electrocution. Keep away children or individuals who are not able to assess the risks associated with using this product.

⚠ CAUTION

Risk of injury. Prevent pedestrians from tripping over cables.

⚠ CAUTION

Risk of injury. Prevent vehicles from driving over the charging cable.

ℹ NOTE

Error messages are only displayed on the SG-ALESPL22KW

If the charging station displays an error message, refer to the error codes list in this document to take the appropriate measure.

2.2 Intended use

The SOLARMG charging station is intended exclusively for charging electric vehicles. The charging station is for use in private and semi-public areas, such as private property, company car parks or depots, access to which is limited. When installed correctly, it may be used by untrained individuals.

⚠ DANGER

Risk of injury and electrocution. Installation, (de)commissioning and maintenance of the charging station may only be performed by a qualified electrician.

It is essential that the qualified electro-technical technician has:

- Expertise on all relevant general and specific rules regarding safety and incident prevention.
- Comprehensive knowledge of applicable electrical regulations.
- The ability to identify risks and avoid potential hazards.
- Received and read the installation instructions and these operation instructions.

The SOLARMG charging station can be used as a single charging point for private use. In this case it is configured via the MyEve App or the ACE Service Installer by the installer of the charging station. The SOLARMG charging station can also be used in a group of several charging stations.

2.2.1 Operating conditions

Operating temperature	-25 °C to +55 °C
Relative atmospheric humidity	5 to 95 %
Electrical safety class	Class I
Degree of protection (casing)	IP55
IK protection (mechanical impact)	IK10

2. SAFETY AND USAGE INSTRUCTIONS

NOTE

The operating temperature stated is under the following conditions:

- A maximum charging power of 11 kW is only guaranteed at an ambient temperature above 40 °C and below the stated maximum operating temperature.
 - The effect of direct solar radiation on the charging station is excluded.
 - The effect of a front cover with another color than RAL9016 is excluded.
 - The effect of Customizations applied on the charging station is excluded.
 - The stated charging performance is solely applicable to the charging station itself, actual performance is dependent on the vehicle and the grid connection.
-

3. PRODUCT OVERVIEW

EN

3.1 Exterior view



No.	Description
1	SG-ALESS7KW model with socket
2	SG-ALESS7KW model with fixed charging cable

No.	Description
3	SG-ALESPL22KW model with socket
4	SG-ALESPL22KW model with fixed charging cable

3.2 Bottom view

Position of the identification label:



Figure 3.1: Bottom view of charging station

No.	Description
1	Identification label

3.3 Identification label

The identification label shows the following information:



No.	Description
1	OCCP charge point model name (consisting of the platform name and the last five digits of the article number)
2	Type / Article number
3	Object number (unique number per charging station)
4	Technical specifications (such as the number of phases, maximum charging current and voltage)

NOTE

When contacting your charge point supplier / operator, always have your type / article number and object number available to facilitate quick support.

3.4 User interface

3.4.1 LED indications of the SG-ALESS7KW



No.	Description
1	LED indicator

The SG-ALESS7KW is equipped with a LED. See the table below for the meaning of the different color combination and flashing.

Status indications of the LED

	Stand-by, ready to use
	Charge card accepted or cable connected
	Communicating with vehicle or charging complete
	Active charging session

3. PRODUCT OVERVIEW

Status indicator symbols during smart EV charging (load balancing)



Load balancing OFF



Load balancing activated: reduced charging



Load balancing activated: charging paused

Status Indications for errors



The charging station detected an error. Contact your charge point operator.



The presented charge card is not authorized for charging. Charging cable is connected but no charging occurs.


3.4.2 Display of the SG-ALESPL22KW



Figure 3.2: SG-ALESPL22KW

No.	Description
-----	-------------

1	Display
---	---------

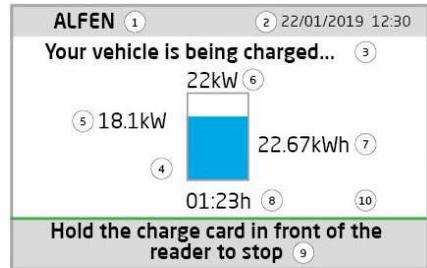

No.	Description
-----	-------------

- | | |
|---|--|
| 1 | Charge point ID: Identification is determined by the reseller or provider of the backoffice management system. This ID can be shared e.g. if support is needed. |
| 2 | Date and time: these are set automatically by a back office management system or during installation, using the MyEve app or the ACE Service Installer. If the charging station does not have a current time, this field is invisible. |
| 3 | Status information |
| 4 | Status indicator (symbols) |
| 5 | Current charging capacity to the connected vehicle |
| 6 | Maximum charging capacity of the charge point |
| 7 | Energy consumed during the current charging session |
| 8 | Duration of the current charging session |
| 9 | Usage instructions. In this field, instructions are displayed. If an error occurs, an error code and instruction will also be shown in this field. |

3.4.2.1 Status indicator symbols



Charge card accepted or cable connected



Warning. Notification with error code



Communicating with vehicle or charging complete



Error. Notification with error code



Charging session active, with charging speed indication



Progress bar

3.4.3 Access control for local authorization (RFID)

To control local user access to an SOLARMG charging station, install an RFID card as the 'Master key'. With this Master Key, you can grant access to other RFID cards for using your charging station.

NOTE

Your charging station must be configured correctly in order to accept Master Keys. For stand-alone charging stations this functionality is automatically ON. If the charging station is delivered with a pre-programmed back-office management system, this functionality will be OFF.

3.4.3.1 Installing the Master Key

1. Select an RFID card, like the included SOLARMG charge card.
2. Hold the RFID card in front of the card reader for 10 seconds.
3. After 10 seconds, the RFID card will be registered as the Master Key. The following icon appears on the screen:



NOTE

The charging station does not recognize the RFID card and will give a warning first. Ignore the warning.

NOTE

The charging station will only recognize one RFID card as the Master Key.

Once the Master Key is registered, it can be used to add or remove charge cards from the local database.

3.4.3.2 Adding and removing charge cards in the local database

For every charge card held in front of the charging station, a sound signal will be given. Follow the on-screen instructions to manage access control:

NOTE

The Master Key cannot be used for charging. It is only used for access control of the charging station.

1. Hold the Master key in front of the RFID-reader



2. Hold the charge card you wish to add in front of the RFID-reader. The following symbol is displayed:



3. Hold the charge card you wish to remove in front of the RFID-reader. The following symbol is displayed.



4. To close the database, hold the Master Key again in front of the RFID-reader.

NOTE

If you have added or removed a RFID card in error, you can immediately hold it in front of the card reader to undo the action.

NOTE

To prevent the local database from being 'open' to access control, the menu will close automatically if no card has been detected or removed after 10 seconds. The symbol will disappear from the display.

3. PRODUCT OVERVIEW

3.4.3.3 Removing the Master Key

A Master key can only be removed using the MyEve app or the ACE Service Installer. If necessary, you can ask for help from one of our technicians. This might, however, incur costs. Therefore, always keep the Master key in a safe location.

4.1 Socket model: Start charging with charge card

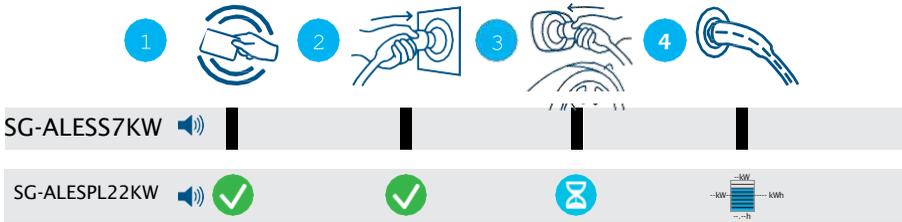


Figure 4.1: Starting the charging process with user authorization. Symbols shown on the user interface

No.	Description
1	Scan the charge card on the charging stations RFID-interface
2	Plug the charging cable into the socket
3	Plug the charging cable into the car
4	Charging in progress

4.2 Socket model: Stop charging with charge card

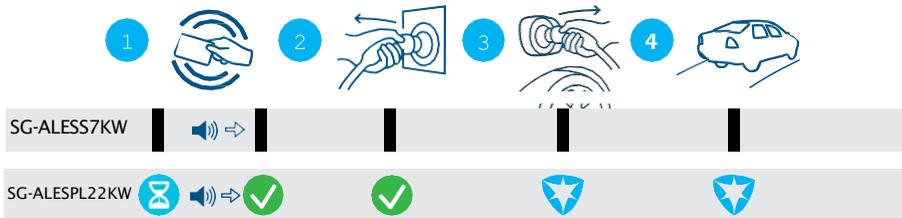


Figure 4.2: Stopping the charging process. Symbols shown on the user interface

No.	Description
1	Scan the charge card on the charging stations RFID-interface
2	Remove the charging cable from the socket
3	Remove the charging cable from the car
4	Leave the charging place

4. OPERATION

4.3 Socket model: Start charging with Plug&Charge

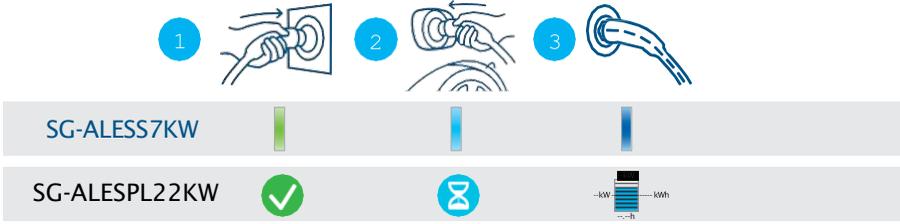


Figure 4.3: Starting the charging process without charge card. Symbols shown on user interface

No.	Description
1	Plug the charging cable into the socket
2	Plug the charging cable into the car
3	Charging in progress

4.4 Socket model: Stop charging with Plug&Charge

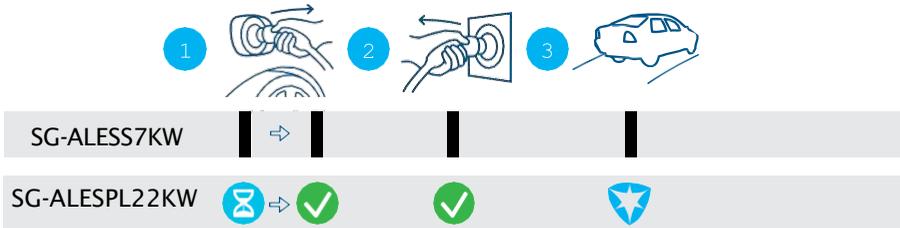


Figure 4.4: Stopping the charging process without charge card. Symbols shown on user interface

No.	Description
1	Remove the charging cable from the car
2	Remove the charging cable from the socket
3	Leave the charging place

4.5 Fixed cable model: Start charging with charge card

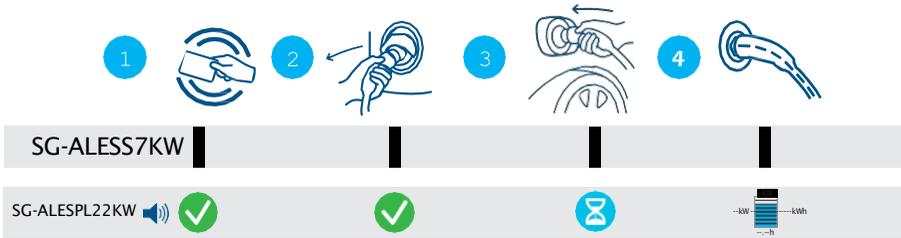


Figure 4.5: Starting the charging process with user authorization. Symbols shown on the user interface

No.	Description
1	Scan the charge card on the charging stations RFID-interface
2	Remove the charging cable from the charging station
3	Plug the charging cable into the car
4	Charging in progress

4.6 Fixed cable model: Stop charging with charge card

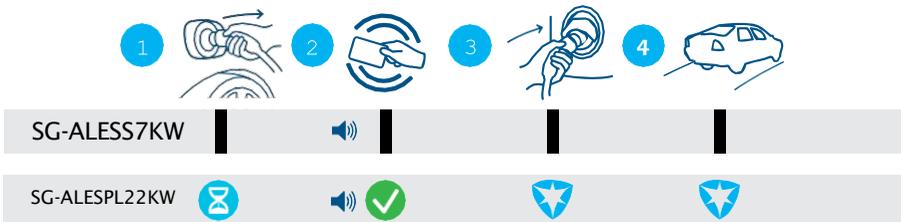


Figure 4.6: Stopping the charging process. Symbols shown on the user interface

No.	Description
1	Remove the charging cable from the car
2	Scan the charge card on the charging stations RFID-interface
3	Plug the charging cable into the charging station
4	Leave the charging place

4. OPERATION

4.7 Fixed cable model: Start charging with Plug&Charge

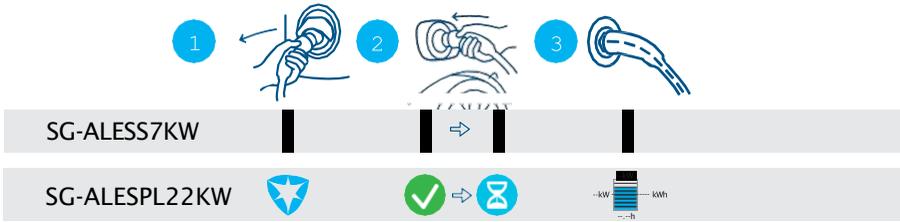


Figure 4.7: Starting the charging process without charge card. Symbols shown on user interface

No.	Description
1	Remove the charging cable from the charging station
2	Plug the charging cable into the car
3	Charging in progress

4.8 Fixed cable model: Stop charging with Plug&Charge



Figure 4.8: Stopping the charging process without charge card. Symbols shown on user interface

No.	Description
1	Remove the charging cable from the car
2	Plug the charging cable into the charging station
3	Leave the charging place

WARNING

Risk of injury and electrocution. Installation, (de)commissioning and maintenance of the charging station must only be performed by a qualified electrician.

5.1 Cleaning

Maintaining the casing of the charging station:

- Annual cleaning, using water and a mild soap. Polish the charging station with a wax that is also suitable for cars.
-

NOTE

The casing of the charging station can be damaged. Do not use any aggressive cleaning agents, high-pressure cleaner, scouring pads or similar.

6. ERROR CODES AND TROUBLESHOOTING

Code	Error message displayed	Icon	Possible cause	Possible countermeasures
General error				
001	Not able to charge. Please call for support.		Unknown general error.	Contact the service department of your charge point supplier.
Charging station related error				
101	One moment please. Your charging session will resume shortly.		DC fault current (>6mA) detected by charging station.	<ul style="list-style-type: none"> • One specific vehicle: Contact your car dealership. • Multiple vehicles: Contact the service department of your charge point supplier.
102	Not able to charge. Please call for support.		Internal error. Unexpected or no voltage on output of power board.	<ul style="list-style-type: none"> • Contact the service department of your charge point supplier. • Check powerboard.
104	Not able to charge. Please call for support.		Internal error. Voltage to low on internal power supply (power board).	<ul style="list-style-type: none"> • Contact the service department of your charge point supplier. • Check powerboard.
105	Not able to charge. Please call for support.		Internal error. No communication with internal power meter.	<ul style="list-style-type: none"> • Contact the service department of your charge point supplier. • Check if internal power meter is configured correctly. • Check internal power meter.
106	Not able to charge. Please call for support.		Power interrupted by-internal RCD.	<ul style="list-style-type: none"> • Contact your installation engineer. • Internal RCD (Type A: 30 mA AC) tripped.
108	Not displayed.	Not displayed.	Charging station configured as Plug & Charge authorization mode and Plug & Charge ID is not configured.	<ul style="list-style-type: none"> • Contact the service department of your charge point supplier. • Configure Plug & Charge ID.
109	Not displayed.	Not displayed.	No connection / connection lost to RFID-reader.	<ul style="list-style-type: none"> • Contact the service department of your charge point supplier. • Check if RFID-reader is connected correctly.
Installation related error				

6. ERROR CODES AND TROUBLESHOOTING

Code	Error message displayed	Icon	Possible cause	Possible countermeasures
201	Error in installation. Please check installation or call for support.		Protective earth not connected or unstable.	<ul style="list-style-type: none"> Contact your installation engineer. Recommended earth resistance of the installation < 100 Ohm.
202	Input voltage too low, not able to charge. Please call your installer.		Supply voltage below 210 VAC.	Contact your installation engineer.
206	Temporary set to unavailable. Contact CPO or try again later.		Charging station is set to inoperative by the charge point operator / the charging station is updating.	Contact your charge point operator. <ul style="list-style-type: none"> Firmware update in progress.
208	Not displayed.	Not displayed.	Supply voltage above 275 VAC.	<ul style="list-style-type: none"> Contact the service department of your charge point supplier. Check voltage levels.
209	Not displayed.	Not displayed.	No connection / connection lost to DSMR4.x / SMR5.0 (P1) smart energy Meter.	<ul style="list-style-type: none"> Contact the service department of your charge point supplier. Check DSMR4.x / SMR5.0 (P1) smart energy Meter connection.
210	Not displayed.	Not displayed	No connection / connection lost to Modbus TCP/IP energy meter / energy management system.	<ul style="list-style-type: none"> Contact the service department of your charge point supplier. Check Modbus TCP/IP energy meter / energy management system.
211	Not able to lock cable. Please call for support.		Unable to move locking motor during build-in self-test.	<ul style="list-style-type: none"> Contact your installation engineer. Check if locking motor is connected correctly. Check if locking motor can move.
212	Error in installation. Please check installation or call for support.		Missing phase in installation.	<ul style="list-style-type: none"> Contact your installation engineer. Check voltage levels.
213	Not displayed.	Not displayed.	No connection / connection lost to TIC smart energy Meter.	<ul style="list-style-type: none"> Contact the service department of your charge point supplier. Check TIC smart energy Meter connection.

Vehicle related error

6. ERROR CODES AND TROUBLESHOOTING

Code	Error message displayed	Icon	Possible cause	Possible countermeasures
301	One moment please your charging session will resume shortly.		Unknown error in communication with car.	<ul style="list-style-type: none"> • Check car and charging cable. • Otherwise contact the service department of your charge point supplier.
302	One moment please your charging session will resume shortly.		Safety measure, Vehicle draws more power than allowed / did not reduce power in time according to the IEC 61851 standard.	<ul style="list-style-type: none"> • One specific vehicle: Contact your car dealership. • All vehicles: Contact the service department of your charge point supplier.
303	One moment please your charging session will resume shortly.		Safety measure, vehicle has started and stopped charging to often within 1 minute.	<ul style="list-style-type: none"> • Check car and charging cable. • Otherwise contact the service department of your charge point supplier.
304	Charging not started yet to continue please reconnect cable.		Cable connected for more than 2 minutes without starting a charging session.	<ul style="list-style-type: none"> • Reconnect cable and start charging session within 2 minutes. • Otherwise contact the service department of your charge point supplier.
Ambient or equipment related error (user, plug, cable, weather conditions etc.)				
401	Inside temperature high. Charging will resume shortly.		Temperature inside the charge point above 70 degrees Celsius.	<p>Unexpected:</p> <ul style="list-style-type: none"> • Ambient temperature. • No EV charging. <p>Contact the service department of your charge point supplier.</p> <p>Expected:</p> <ul style="list-style-type: none"> • Ambient temperature. • Installed in direct sunlight. • EV charging. <p>Contact your installation engineer.</p>
402	Inside temperature low. Charging will resume shortly.		Temperature inside the charge point below -40 degrees Celsius.	<ul style="list-style-type: none"> • Unexpected ambient temperature. <p>Contact the service department of your charge point supplier.</p> <ul style="list-style-type: none"> • Expected ambient temperature.
404	Not able to lock cable. Please reconnect cable.		Unable to lock the charging cable.	<p>Contact the service department of your charge point supplier.</p> <ul style="list-style-type: none"> • Check socket and charging cable plug. • Check if the lock motor can move freely.

6. ERROR CODES AND TROUBLESHOOTING

Code	Error message displayed	Icon	Possible cause	Possible countermeasures
405	Cable not supported. Please try connecting your cable again.		Measure PP resistance of the charging cable is out of range according to the IEC 61851 standard.	<ul style="list-style-type: none">• One specific cable: Issues with other charge points. Cable broken <ul style="list-style-type: none">• All cables: No issue with other charge point. Contact the service department of your charge point supplier.
406	No communication with vehicle. Please check your charging cable.		Monitored CP voltage level is out of range according to the IEC 61851 standard.	<ul style="list-style-type: none">• One specific cable: Issues with other charge points. Cable broken <ul style="list-style-type: none">• All cables: No issue with other charge point. Contact the service department of your charge point supplier.
407	Not displayed.	Not displayed.		

7. WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)



Electrical and electronic equipment contains materials, components and substances that may be hazardous and present a risk to human health and the environment if not handled correctly.

Equipment marked with the illustrated crossed out wheeled bin is electrical and electronic equipment. The crossed out wheeled bin indicates that this waste must be collected separately and must not be discarded together with household waste.

Refer to your local authority for collection schemes under which residents can dispose waste electrical and electronic equipment at a recycling center or other collection points.

Contact

SOLARMG Srl
Via Enrico De Nicola 9
52025 Montevarchi AR
Italia

Contact:

sales@solarmg.it

support@solarmg.it

assistenza@solarmg.it

Phone:

+39 055 9110077

Website:

solarmg.it

